

Evaluation of TCMS V2

Before you start, you need to install fresh TCMS V2 software into your PC, You Can download the software from <http://www.fingertecusa.com/zip/FingerTec%20TCMS%20v2.2%20015.zip>

If you need any assistance, please do refer to our [software user manual guide](#), [TCMSv2 Trial Version Guide](#) or access our [online video guide](#). Or check out our latest troubleshooting guide to find more information on tips of the system. <http://www.fingertec.com/newsletter/Oct2010/TIPS-02.html>

Follow the steps below to activate TCMS V2:

Step 1

Install a copy of TCMS V2 into your PC and start to configure the settings.

Step 2


Disabled	Product Key	Activation	ID	Description	Model	Serial No	Connection	Baudrate	IP Address	Port
<input checked="" type="checkbox"/>	W9Z6-2TBJ-GSS6		1		R2		COM1	15200	192.168.1.201	4370
							COM2			
							COM3			
							COM4			
							COM5			
							COM6			
							TCP/IP			
							USB			

Insert the Product Key (W9Z6-2TBJ-GSS6).

Select terminal model as R2 (or any models as you want to).


Select Connection as USB.

Step 3

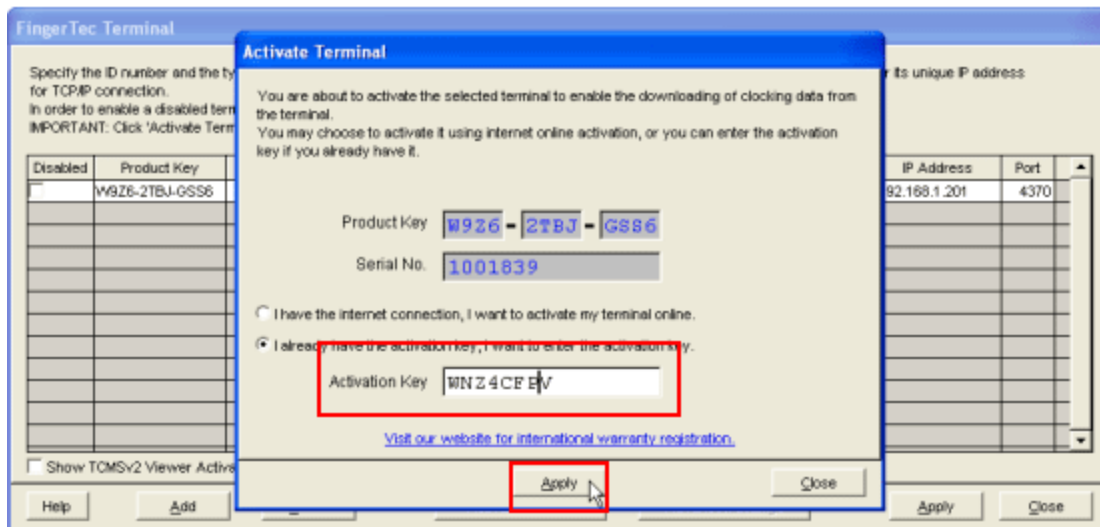

Insert activation key (WNZ4CFPV) into the column.
Click Apply to proceed.

Step 6

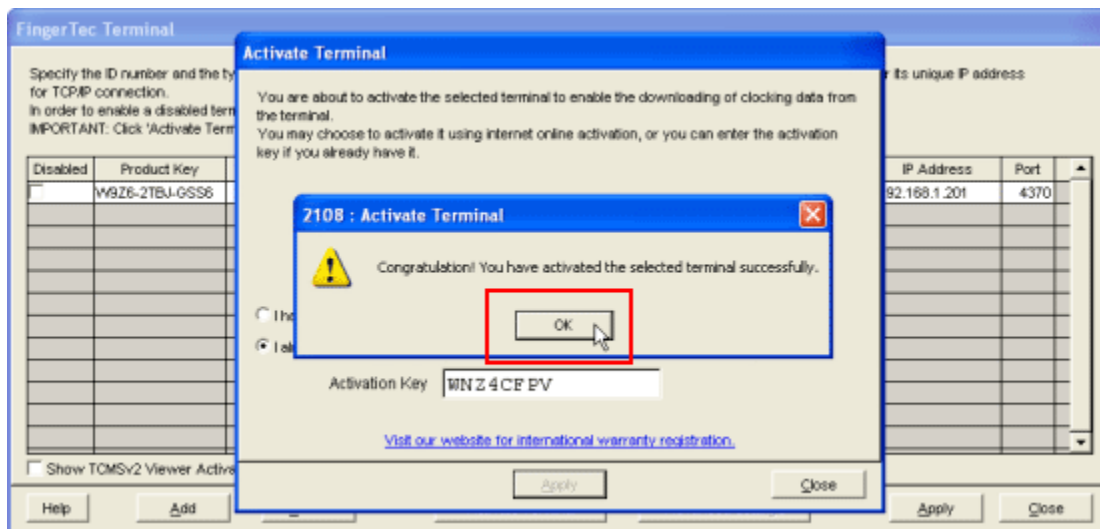

TCMS V2 will be activated successfully.
Click OK to proceed.

Step 7

Restore the database from the sample database you have downloaded before