

Evaluation of TCMS V2

Before you start, you need to install fresh TCMS V2 software into your PC, You Can download the software from <http://www.fingertecusa.com/zip/FingerTec%20TCMS%20v2.2%20015.zip>

If you need any assistance, please do refer to our [software user manual guide](#), [TCMSv2 Trial Version Guide](#) or access our [online video guide](#). Or check out our latest troubleshooting guide to find more information on tips of the system. <http://www.fingertec.com/newsletter/Oct2010/TIPS-02.html>

Follow the steps below to activate TCMS V2:

Step 1

Install a copy of TCMS V2 into your PC and start to configure the settings.

Step 2

Specify the ID number and the type of model for each installed terminal, and its known communication port for RS-232/485 connection, or its unique IP address for TCP/IP connection.
In order to enable a disabled terminal, make sure the terminal is connected online to your PC before you untick the 'Disabled' checker.
IMPORTANT: Click 'Activate Terminal' button to activate the terminal in order to able to download clocking data from terminal.

Disabled	Product Key	Activation	ID	Description	Model	Serial No	Connection	Baudrate	IP Address	Port
<input checked="" type="checkbox"/>	W9Z6-2TBJ-GSS6		1		R2		COM1	15200	192.168.1.201	4370
<input type="checkbox"/>							COM2			
<input type="checkbox"/>							COM3			
<input type="checkbox"/>							COM4			
<input type="checkbox"/>							COM5			
<input type="checkbox"/>							COM6			
<input type="checkbox"/>							TCP/IP			
<input type="checkbox"/>							USB			

Show TCMSv2 Viewer Activation


Help Add Delete Activate Terminal Advanced Settings Apply Close

Insert the Product Key (W9Z6-2TBJ-GSS6).

Select terminal model as R2 (or any models as you want to).


Select Connection as USB.

Step 3

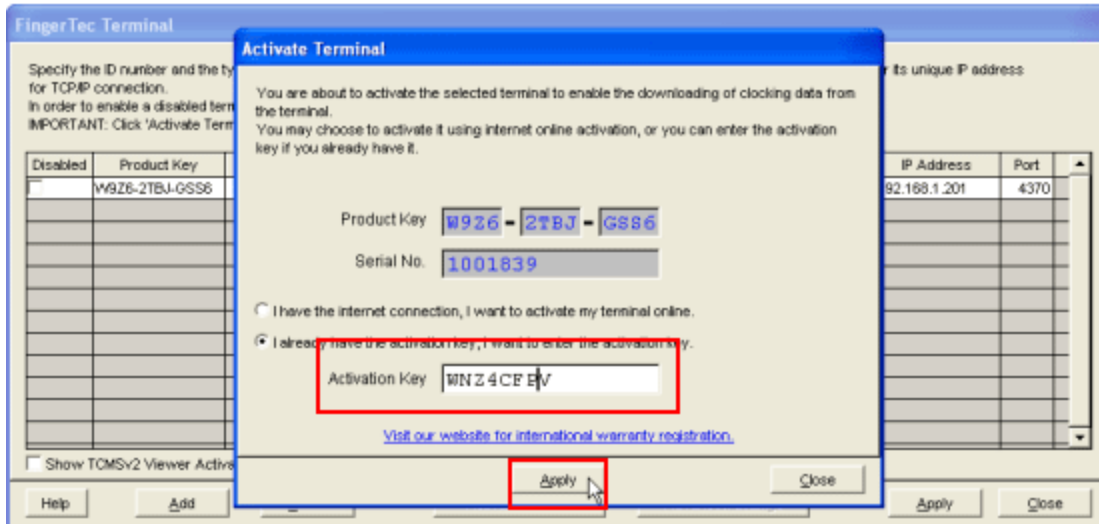


Insert activation key (WNZ4CFPV) into the column.
Click Apply to proceed.

Step 6

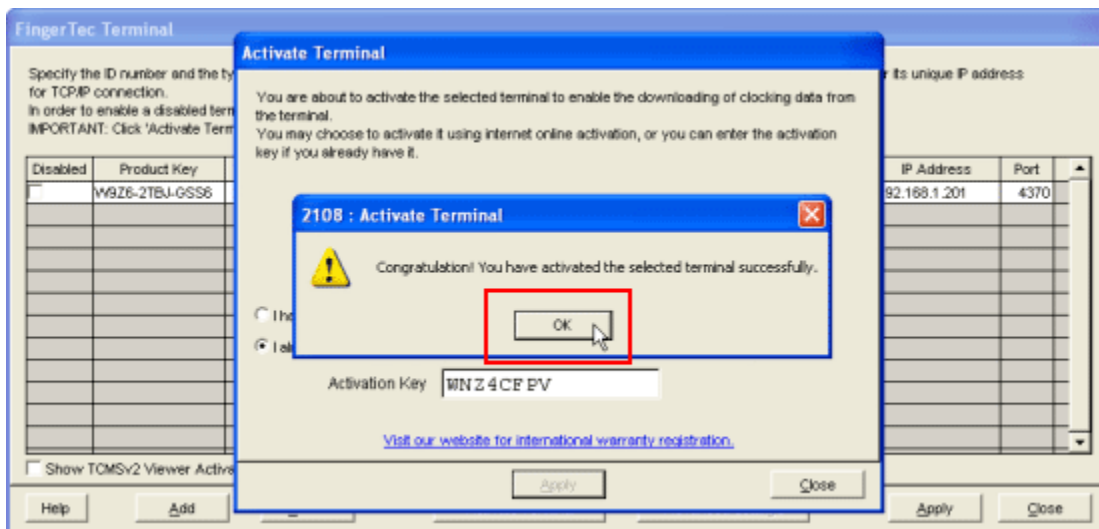

TCMS V2 will be activated successfully.
Click OK to proceed.

Step 7

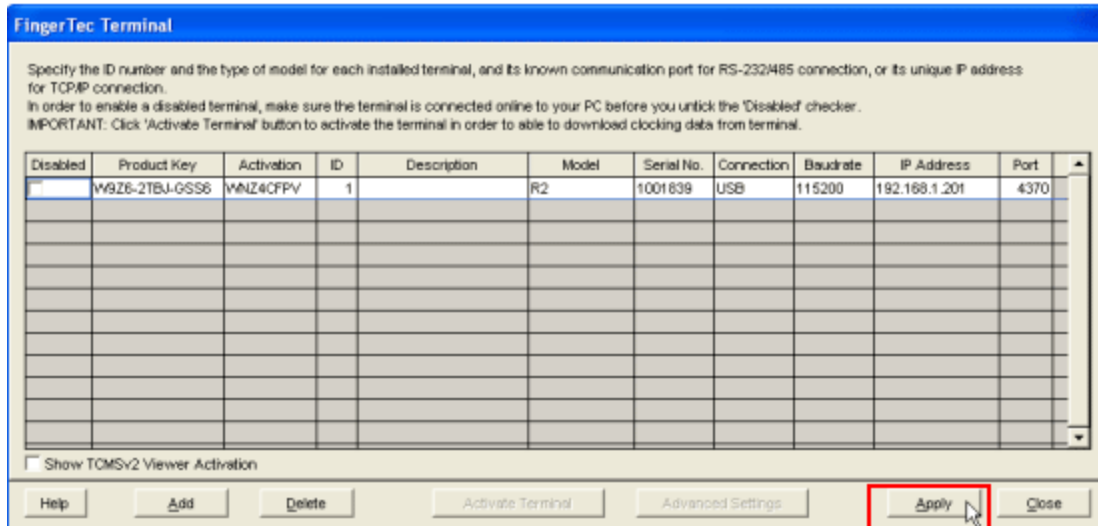


Click Apply to start using TCMS V2.

Step 8

Click on this link to download the sample database. <http://fingertecusa.com/zip/sampletcmsv2.zip>

In TCMS Click on Configuration> Backup Restore Database

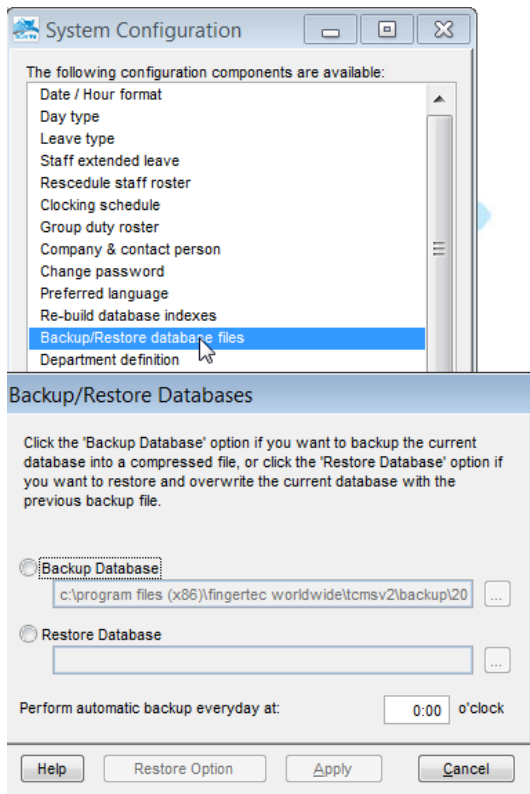

Restore the database from the sample database you have downloaded before